



**PRIORITY:** Normal

**DATE:** August 2, 2006

**TITLE:** Instructions for Migrating AVPCs to Windows CE

**ECO REFERENCE:**



**PRODUCT(S) AFFECTED:** AVPC320128T1/T2 (Type A), AVPC32096T1/T2 (Type B), AVPC320064T1/T2 (Type F)

**SUMMARY:** These instructions explain how to migrate the operating system on the embedded PC from Windows 2000 to Windows CE via the compact flash card. These instructions are valid for the Compact Flash Kit (part numbers 1234200703 (for Type A), 1234200702 (for Type B), and 1234200701 (for Type F).

## 1 Turn off power and open the sign:

- Disconnect all power from the sign at the power source to prevent electrical injury or damage.
- Turn the panel latches counter-clockwise. Carefully raise the panel of the sign.
- Make sure the support latch is engaged.

Be aware of the following safety considerations when servicing signs:

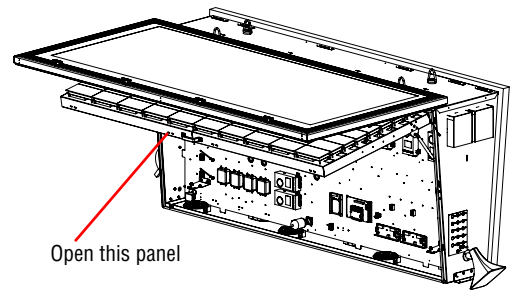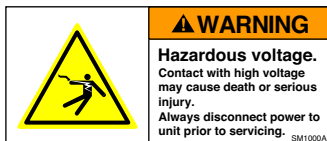

© Copyright 2006 Adaptive Micro Systems LLC. All rights reserved.

Adaptive Micro Systems • 7840 North 86th Street • Milwaukee, WI 53224 USA • 414-357-2020 • 414-357-2029 (fax) • <http://www.adaptivedisplays.com>


Trademarked names appear throughout this document. Rather than list the names and entities that own the trademarks or insert a trademark symbol with each mention of the trademarked name, the publisher states that it is using names for editorial purposes and to the benefit of the trademark owner with no intention of improperly using the trademark.

The following are trademarks of Adaptive Micro Systems: Adaptive, Alpha, AlphaLert, AlphaNET, AlphaNet plus, AlphaEclipse, AlphaEclipse RoadStar, AlphaEclipse StreetSmart, AlphaPremiere, AlphaTicker, AlphaVision, AlphaVision InfoTracker, Automode, BetaBrite, BetaBrite Director, BetaBrite Messaging Software, Big Dot, Director, EZ KEY II, EZ95, PagerNET, PPD, PrintPak, Serial Clock, Smart Alec, Solar, TimeNet.

The distinctive trade dress of this product is a trademark claimed by Adaptive Micro Systems LLC.


Due to continuing product innovation, specifications in this manual are subject to change without notice.

## 2 Unplug the power cord to the hard drive:

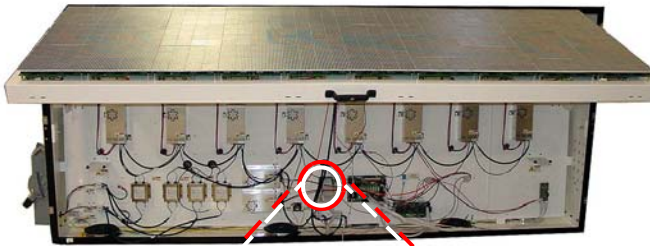


Unplug the power cable going to the hard drive.

## 3 Insert the compact flash card:

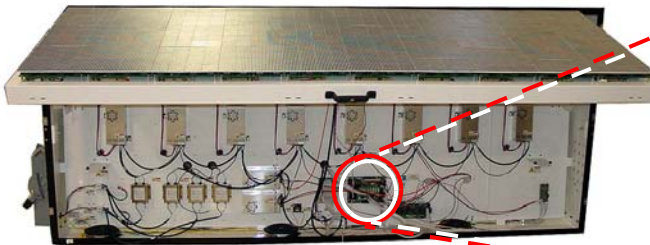

Back view of controller board  
(labels on the flash card may be different)

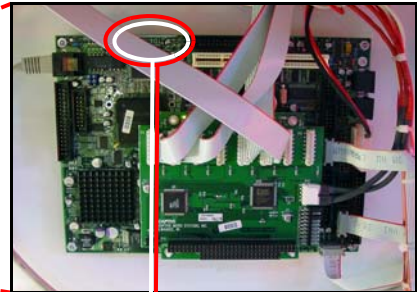

With the white label on the compact flash card facing the back of the sign, slide the flash card into the back of the controller board.



**Note:** There is a white stripe across the top of the board where the card should be inserted.

Although you can't see the back of the controller board, the compact flash card should slide in the grooves on the back. You may need to adjust the position of the flash card until you feel it slide in between the grooves.

## 4

### Verify the migration

- Apply power to the sign.
- If the sign powers on normally and displays the startup sequence, the migration was successful.
- If the sign does not display the startup sequence, then the compact flash card is not seated properly or one of the pins may be bent. In this case, do the following:
  - Disconnect power from the sign.
  - Remove and reinsert the compact flash card.
  - Apply power to the sign.
  - If the sign still does not display the power on sequence, please call Adaptive Micro Systems' Customer Service department at 1-800-719-2838 or 1-414-357-2020, extension 274.

## 5

### Close the sign

Close the display panel and sign door.

THIS PAGE INTENTIONALLY BLANK

PRELIMINARY